 




# GoPro Hero3 and Hero+

Hero3 White video: <https://goo.gl/CfwSJ6>

Hero3 manual: <http://goo.gl/QUrEZ4>
 
## Device Tour - Hero3

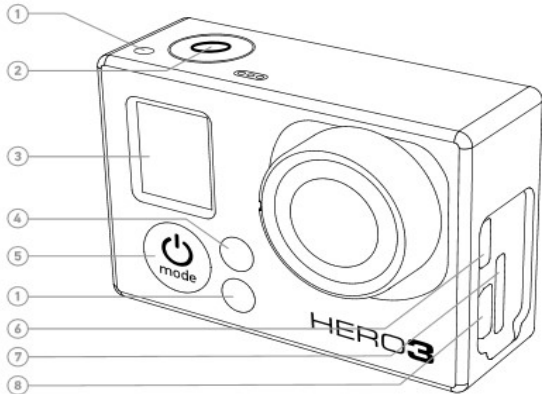


1. Camera Status Lights (red)
2. Shutter/Select Button [  ]
3. Camera Status Screen
4. Wireless Status Light (blue)
5. Power/Mode Button [  ]
6. Micro HDMI Port (cable not included)
7. microSD Card Slot (microSD card not included)
8. Mini-USB port (supports composite A/C cable/3.5mm stereo mic adapter, not included)

### / Camera Status Screen

 The camera status screen displays the following information about HERO3 White modes and settings:


1. Camera Modes/FOV (field of view)
2. Capture Setting Modes (not shown)
3. Resolution/fps (frames per second)
4. Time Interval Settings (not shown)
5. Counter
6. Time/Storage/Files
7. Battery Life

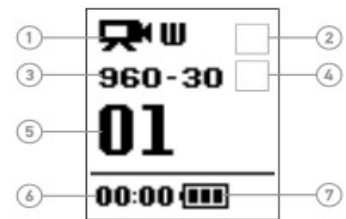







*Note: The icons that appear on the camera status screen vary by mode.*

### / Camera Modes

#### OVERVIEW

The HERO3 White features several camera modes. To cycle through the modes, press the **Power/Mode** button [  ] repeatedly.

The modes appear in the following order:

	Video	Record video
	Photo	Capture a single photo
	Burst	Capture 3 photos in 1 second
	Time Lapse	Capture a series of photos at timed intervals
	Settings	Adjust camera settings
	Playback	Play back video and photos. Appears only if camera is connected to a TV or LCD Touch BacPac™ (optional accessory, sold separately).

 
**PRO TIP:** Use **Burst** to capture fast-moving subjects.

## Device Tour – GoPro Hero+

Hero+ video: <https://goo.gl/ipkYqB>


Hero+ Manual: <http://goo.gl/YbPK0x>

### / The Basics

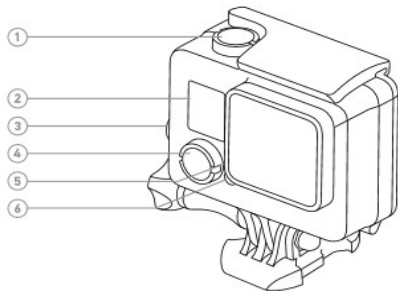

1. Shutter/Select Button
2. Camera Status Screen
3. Settings/Tag Button
4. Power/Mode Button
5. Wireless Status Light (blue)
6. Camera Status Light (red)

### / The Basics

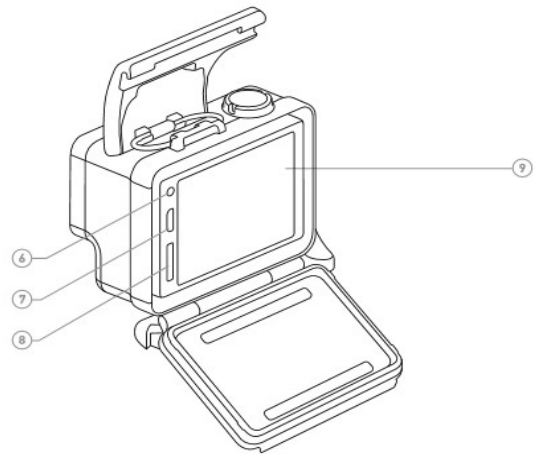 

7. Micro-USB Port
8. microSD Card Slot  
(microSD card not included)
9. Touch Display

## Touchscreen controls

The best way to learn all the camera settings is to try them out! You will need to select a mode before you begin taking pictures/video. Once you select the camera mode you want to use, press the Shutter/Select button to take a picture or video.

### CAPTURING VIDEO

1. Tap the mode icon to display the camera modes, and then tap **Video**.
2. Press the **Shutter/Select** button. The camera beeps once and the camera status lights flash while the camera is recording.
3. To stop capturing, press the **Shutter/Select** button. The camera status lights flash three times and the camera beeps three times.

If the memory card is full or the battery is out of power, your camera automatically stops recording. Your video is saved before the camera powers off.

**PRO TIP:** When QuikCapture is enabled, you can turn the camera on and immediately begin capturing video just by pressing the **Shutter/Select** button.

Optionally, download the **GoPro App** to your smartphone or tablet. The app allows you to control your camera remotely. Follow on-screen instructions. Remember, "goprohero" is the default password. Find the App on Android or the Apple App Store